



1. Handset
2. Message Waiting Light
3. STATUS
4. Ringer On/Off Switch
5. FLASH
6. REDIAL
7. VOL

## SPA901 IP Phone

### Phone Features

#### 1. Handset

#### 2. Message Waiting Light

The light is on when there is a message. To access voice mail, dial the mailbox number given to you by your Phone Administrator.

**NOTE: If the light double blinks, there is a connection problem. If the network cable is securely in place and the light still double blinks, contact your Phone Administrator. If the light fast blinks, it is downloading or writing firmware. Do not power off.**

#### 3. STATUS

This light can be green, red, orange or off.

Status Light is:	It means:
Off	You can make a call (normal state).
Solid Green	You can make a call (line is shared with another phone).
Blinking Green	You can pick up at this phone (a shared line was put on hold).
Blinking Red	You can pick up (a call was put on hold at this phone).
Solid red	You cannot make a call (line is in use).
Solid Orange	You cannot make a call (phone is not registered to the System). Contact your Phone Administrator.

#### 4. Ringer On/Off Switch

Move the switch up to turn the ringer on or down to turn it off.

#### 5. FLASH

Press to pick up a second incoming call, transfer a call, or set up a three way conference call.

#### 6. REDIAL

Press to redial the last number called.

#### 7. VOL

Press the right side to increase or the left side to decrease the volume for the handset (when on a call) or the ringer (when the phone is ringing).

### Transferring Calls

#### Attended Transfer

1. Press **FLASH** during an active call.
2. The first call goes on hold and there will be a dial tone. Dial the second phone number.
3. When the second person answers, you can have a private conversation without the first person hearing it.
4. To connect the call to the second person, hang up the phone.

#### Unattended Transfer

1. Press **FLASH** during an active call.
2. The first call is placed on hold. There will be a dial tone. Dial the second telephone number.
3. When the phone rings, hang up.

### Three Way Conference Calling

1. Press **FLASH** during an active call.
2. The first call is placed on hold. There will be a dial tone. Dial the phone number to conference in.
3. Press **FLASH** again. The conference call will now include all parties.
4. Hanging up disconnects all parties.

## LINKSYS<sup>®</sup>

A Division of Cisco Systems, Inc.

For additional information or troubleshooting help go to the Linksys website.

#### Website

<http://www.linksys.com/international>

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2006 Cisco Systems, Inc. All rights reserved.

SPA901-QR-EU-60522 NC DF

Quick Reference

