

# Use of USB VoIP Phone with SJPhone

## 1. Install SJPhone

- Insert software CD to CD-ROM or download the software.
- Run SJPhone setup to install it.

## 2. Connect USB VoIP Phone to PC

Connect USB VoIP Phone to PC, the LCD shows “VOIP-PHONE”.



## 3. Install SJMate


- Insert software CD to CD-ROM or download the software.
- Run SJMate setup to install it

### Note:


- You must install SJMate after SJPhone is installed.
- You must close SJPhone first when you want to install SJMate.

## 4. Run SJPhone

- Double click the icon  on the desktop to start the software.
- To configure operator settings, press  to get Options menu. In profiles, press “New”.  
Give name to profile and press OK.

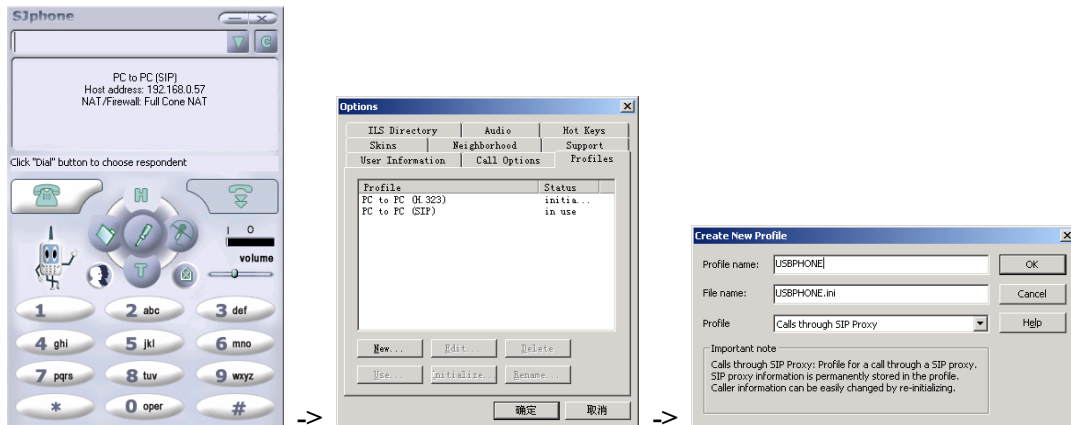

- Add your provider SIP proxy domain name or IP and port address. Add User domain also. Press OK. Type Account name and password to use with your SIP proxy provider. Press OK.

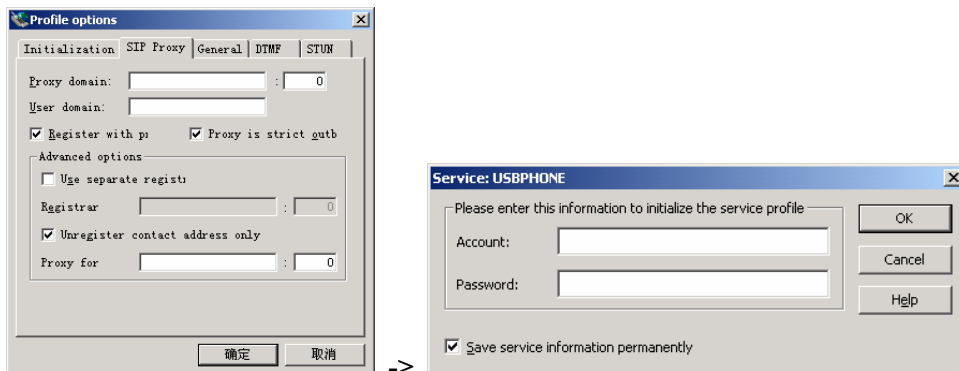

- Verify that your SIP proxy provider profile is in status “In Use”. Press OK. Now SJPhone software is installed and configured for your SIP proxy provider. And USB VoIP Phone is at the ready state.



## 5. Keypad Instruction



### IN/OUT

Press to scroll the caller or dialed number.



Scroll to the contacts.



**Dial/Answer**

Dial out number or Answer a call.



**Hang up**

End talking or refuse incoming call.


**C: Delete Key**

- Press to scroll the skype window at the ready state
- Delete inputted wrong number while dialing.



\*: Press to input “\*”.

#: Press to input “#”.

## 6. Make a call

Enter phone number and then press  to call out.

## 7. Answer a call

When a call comes in, the USB VoIP Phone will ring. Press  to answer the call, or press  to refuse the call.