

HyperMedia Center User Manual Contents

V2.1

INTRODUCTION.....	2
PLAYER CONTROLS	3
NAVIGATION BAR	3
CHAPTER 1 : MY TV	4
1.1 SETTING UP YOUR PCTV	5
2. PLEASE SELECT YOUR CURRENT LOCATION AND CLICK-ON “NEXT” TO CONTINUE.....	5
1.2 TV CONTROL BAR.....	7
1.3 SOURCE INPUT.....	7
1.4 CHANNEL LIST	9
1.5 SCHEDULE	9
1.6 TV SETTINGS.....	10
1.6.1 Edit Channels.....	10
1.6.2 Recording Settings	12
1.6.3 Display Settings	12
1.6.4 Extra Display Settings	13
1.7 EPG 13	
CHAPTER 2 : MY VIDEOS	14
2.1 RECORDING VIDEOS:	14
2.2 MORE VIDEOS	15
2.3 SETTINGS.....	15
2.4 VIDEO CONTROL BAR	16
CHAPTER 3 : PICTURES.....	17
3.1 SNAPSHOT PICTURES	17
3.2 MORE PICTURES	17
3.3 SETTINGS.....	18
3.3.1 SlideShow Interval	18
3.3.2 Format of snapshot picture	19
3.3.3 Total Pictures	19
3.4 PICTURE CONTROL BAR	20
3.5 CHANGING YOUR HYPERMEDIA CENTER SKIN	20
CHAPTER 4 : RADIO (PLEASE NOTE THIS FUNCTION IS ONLY OFFERED BY SOME SPECIFIED KWORLD PRODUCTS.....	22

4.1 CHANNEL LIST.....	22
4.2 SCHEDULE	22
4.3 SETTINGS.....	23
4.3.1 Recording Format.....	23
4.3.2 Scan Interval.....	23
4.4 RADIO CONTROL BAR	25
CHAPTER 5 :MUSICS.....	26
5.1 RECORDED AUDIO	26
5.2 MORE MUSIC	26
CHAPTER 6 :SETTINGS	27
6.1 TV 27	
6.2 VIDEOS	27
6.3 PICTURES.....	27
6.4 RADIO.....	27
6.5 GENERAL SETTINGS.....	28
6.6 ABOUT HYPERMEDIA CENTER	28

Introduction

Thank you for choosing KWorld product. Before you start using your system, please read this manual carefully and follow the installation instructions.

HyperMedia Center is an integrated multimedia application that allows you to enjoy all of your digital entertainment - TV, home videos and photos. HyperMedia Center is especially designed for turning your PC/Laptop into an entertainment solution.



Player Controls

There are several methods to control HyperMedia Center

- **By Keyboard**

Control the application by using the **Arrow keys**, **ESC**, and **Enter** keys.






- **By Mouse**

Select items by left-click or scroll wheel.

- **By Remote Control (optional: depends on the model)**

Navigation Bar




	Return to Home page
	Return to previous page
	Minimize HyperMedia Center to the task bar.
	Adjust the display size
	Exit HyperMedia Center.

Chapter 1 : My TV

HyperMedia Center is an all-in-one entertainment solution for the modern life. Now you can watch and record your favorite TV programs anytime you like. When you run HyperMedia Center for the first time, the setup wizard will guide you to configure the TV settings.



1.1 Setting Up Your PCTV

 
Before you execute HyperMedia Center for the first time (using the icon on your desktop ) , please connect your KWorld device to your computer.




1. When executing HyperMedia Center for the first time, please select Analog or Digital TV according to your device and click-on “Next” to continue.




2. Please select your current location and click-on “Next” to continue.

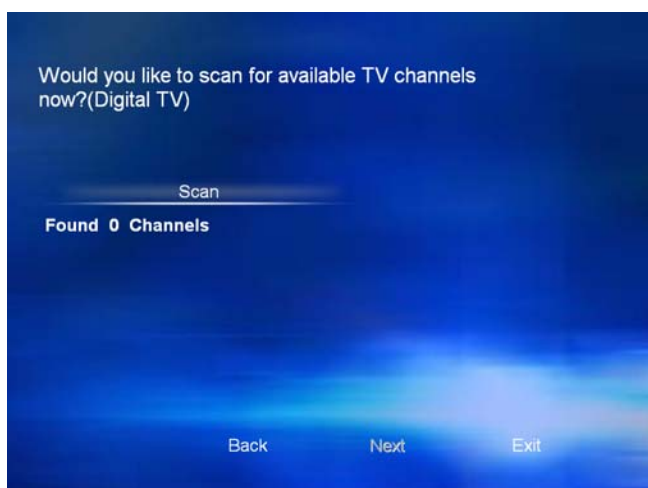

  3. Please click-on “Scan” to start channel scanning.

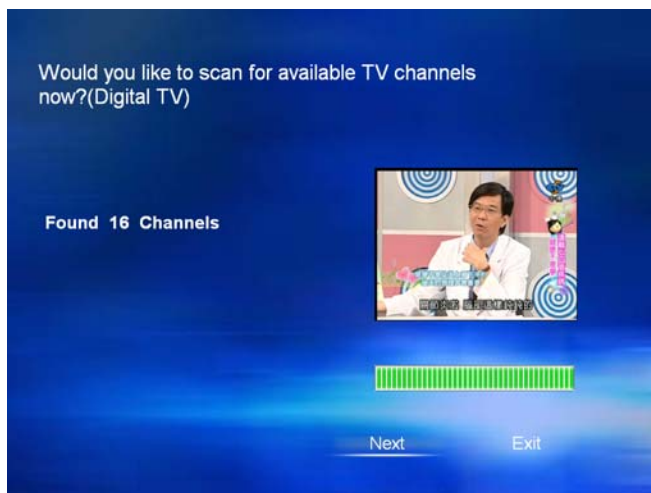



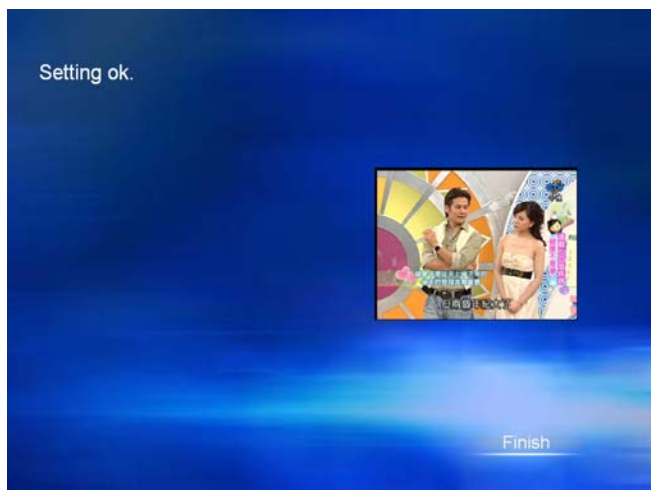



















4. When channel scanning is completed, your display window would show “Found XX Channels”. Please click-on “Next” to continue.



5. Your PCTV is now setup completely, please click-on Finish to exit the setup mode.

1.2 TV Control Bar

					
	Stop		Pause		Backward
	Forward		Time-Shifting		Capture
	Snapshot		Teletext		Subtitle
	Channel Preview		SAP		Previous Channel
	Next Channel		Volume Down		Mute
	Volume Up		Switch Mode		Switch Channel
	My Favorite Channel List		Add into My Favorite Channel List		Remove from My Favorite Channel List

1.3 Source Input

Choose your TV signal source such as TV / Composite / S-Video.



1.4 Channel List

 
It will assist you to select TV channel.



1.5 Schedule

Schedule the recording of TV program. If you want to cancel a schedule, enter the **Schedule** and choose **Cancel**.



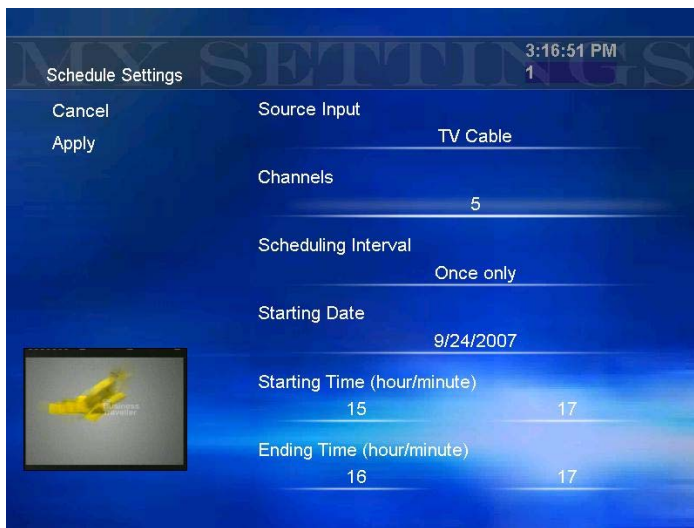

Source Input: Select your TV signal source.

Channels: Choose the channel you want to record

Scheduling Interval: Define the recording rules. The default value is "Once only".

Starting Date: Set the recording date.

Starting/Ending Time: Set the Time to start/end recording (hour/minute).

1.6 TV Settings

Adjust TV signal, recording and display settings here.



Run Setup Wizard: Run Setup Wizard is an easy setup function. It can help you to complete the overall settings of TV function including TV tuner, region and automatic scan of TV channels.


1.6.1 Edit Channels

You may edit the Channel Names according to your preference.



1. Please select the channel you would like to personalize: Delete Channels, Rename Channels, Add/Delete My favorite, and Change Channel Numbering.



Please click-on  to add channels into My Favorite Channel List.



2. When a channel has been added on to My Favorite Channel List, the Star sign would appear beside the channel you have selected.




3. Please select “Yes or No” to exit the pop-up Window.




4. To see all of the channel listing, please make sure the Icon should be shown as .



5. To see “My Favorite Channel Listing”, please click-on .

icon (which would turn into .)

Pointers: You may add new channels into My Favorite Channel Listing by clicking on this icon  on the TV control

panel or this icon  to remove from the listing.

1.6.2 Recording Settings



Configure the recording format

Analog : MPEG 1/2/4, MPEG4

(PSP/iPod/Dvix), H.264, H.264 (PSP/iPod),
MPEG4 (PSP), MPEG4(iPod)

Digital : Recording format depend on source
format.

1.6.3 Display Settings

 


Adjust the display settings (Brightness,
Contrast, Saturation, Hue, Sharpness or default
setting)

1.6.4 Extra Display Settings



Extra Display Settings: Adjust the display aspect ratio (**4:3, 16:9, 16:10**)

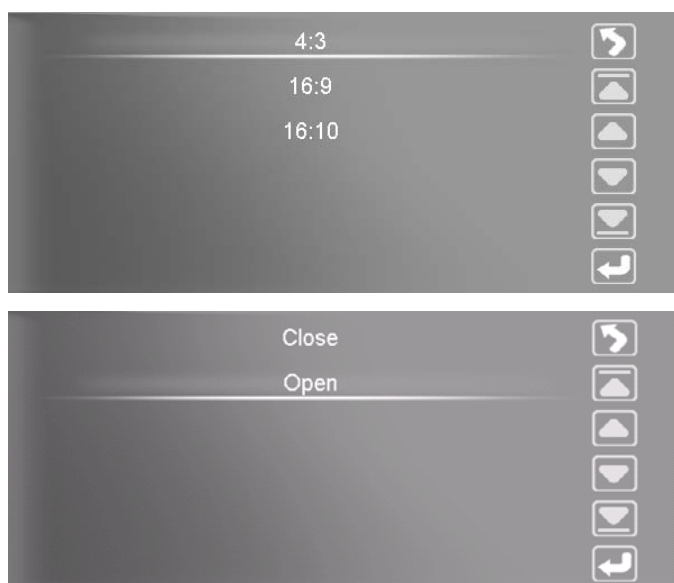

Extra Display Settings: De-noise function for Analog TV. Open it will improve Analog TV quality.

1.7 EPG

EPG (Electric Program Guide) allows you to receive the information for each channel.

Chapter 2 : My Videos

In the Videos page, you can play video files stored in your computer.



2.1 Recording Videos:

Play the video files in a specific folder.

2.2 More Videos

HyperMedia Center is also applicable for playing other video files.








2.3 Settings

Create a specific folder to save recorded video files.



2.4 Video Control bar

		Backward
		Pause
		Forward
		Stop

Chapter 3 : Pictures

In **My Pictures** page, you can view pictures stored in any folder.



3.1 Snapshot Pictures

Click **Snapshot Pictures** button to review the picture files you captured. In addition, you can also check pictures in the slideshow mode.

3.2 More Pictures

Show other picture files in your computer.

3.3 Settings

In Settings, you can create a specific folder to save pictures. Meanwhile, the timeframe of Slideshow can also be set in this option. Besides you can set multi-snapshot pictures from 1 to 10 in “Total pictures” option, and set “Time interval” from 0.2sec to 10sec.



3.3.1 SlideShow Interval



Configure the interval : 1sec , 3 sec , 10sec or 30sec

3.3.2 Format of snapshot picture

Please select your favorite format: BMP or JPEG



 
3.3.3 Total Pictures

Configure Multi-Snapshot pictures: From 1 picture to 100 pictures





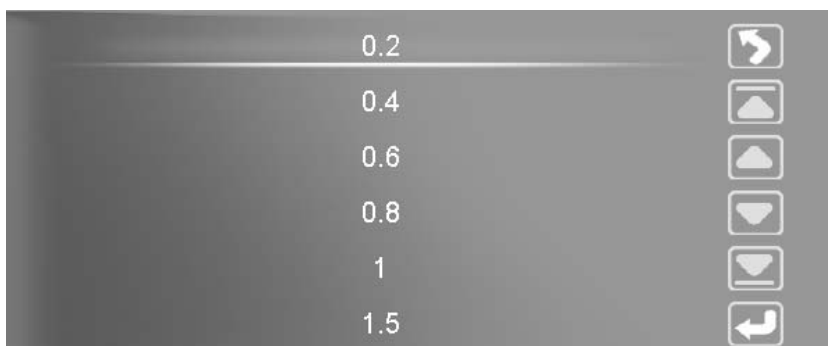


3.3.4 Time interval

Configure Multi-Snapshot interval: From 0.2sec to 10 sec



3.4 Picture Control bar

		Stop
		Backward
		Forward
		Slideshow


3.5 Changing Your HyperMedia Center Skin

Edit and transform the pictures you have taken to your HyperMedia Center.



1. Please select the background photo you would like to use.



2. Please click on the “Stop” button  on the bottom left corner.



3. Please click-on “Background Setting”



4. You have now completed personalizing your HyperMedia Center.

Chapter 4 : Radio (Please note this function is only offered by some specified KWorld products.

Use HyperMedia Center to listen to FM Radio programs (Products has to be with FM function).

Before listening, please make sure the FM Antenna has been plugged in.



4.1 Channel List

It provides a channel list for you to select the preferred FM program.

4.2 Schedule

Schedule allows you to schedule the recording of FM program. You can set up a new schedule to record the FM program, or choose **Cancel** if you wish to call off the recording request.

4.3 Settings

In **Radio**, it allows you to choose saving destination of the FM recording files. More than that, you can also set up the recording format and channel scanning in this option.

 


4.3.1 Recording Format



Configure the recording format: WAVE or WAM


4.3.2 Scan Interval

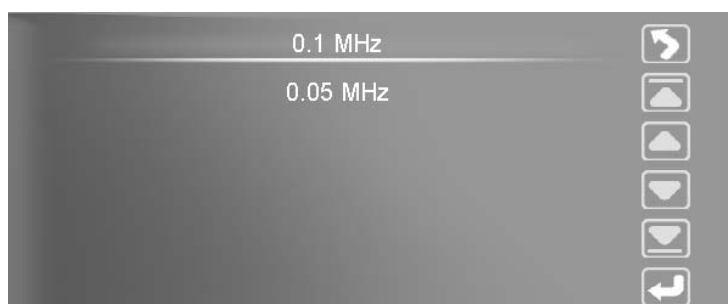

Configure scan channel interval: 0.1 MHz or 0.05 MHz.

FM RDS function: Click the right mouse button and it will pop-up a small window.

 Select “RDS on” and click left mouse button to enable RDS function.

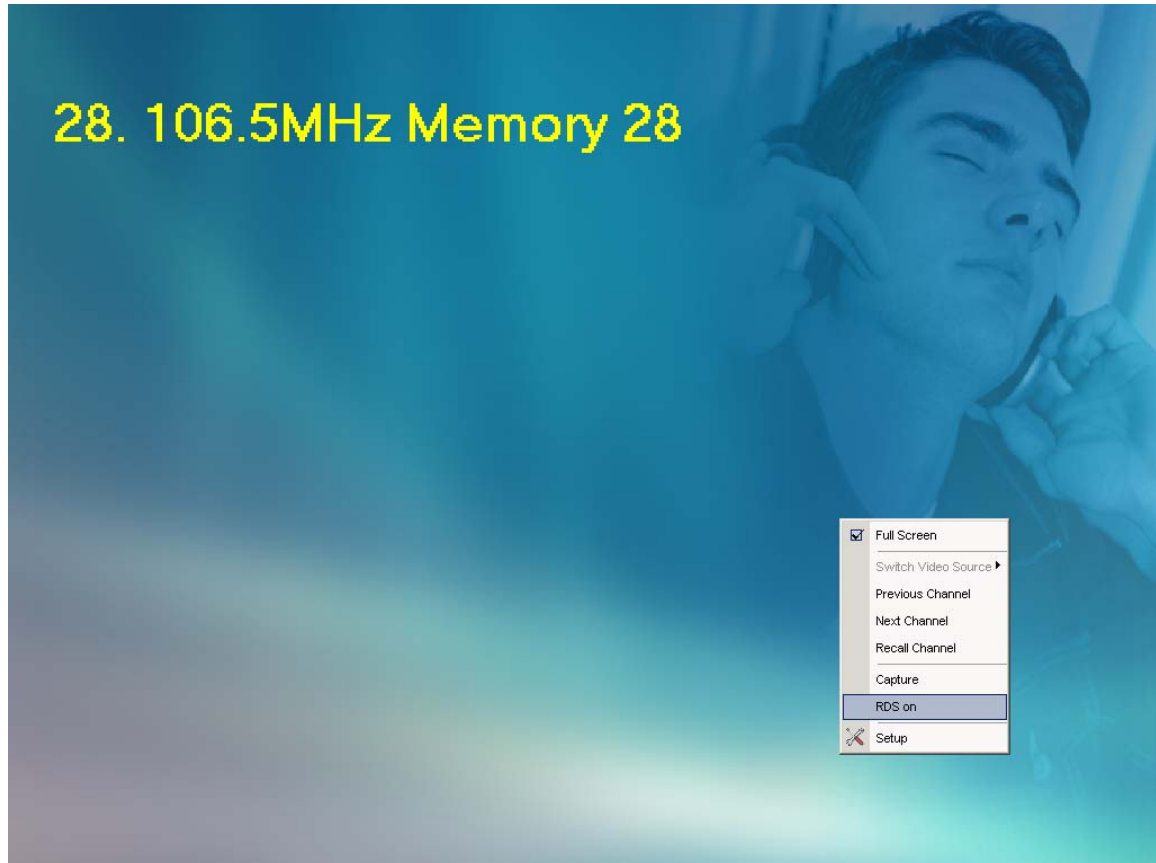

4.4 Radio Control Bar



	Stop		Pause		Backward
	Forward		Capture		Tune Downward
	Last receivable FM Station		Memorize FM Station		Next receivable FM Station
	Tune upward		Last Preset FM Station		Next Preset FM Station
	Mute		Volume Up		Volume Down

Chapter 5 :Musics



5.1 Recorded Audio

You may playback any recorded audio from the FM radio or others in WAVE/WMA format.

5.2 More Music

You may playback any music already collected in your computer.

Chapter 6 :Settings

Click Home Page to open the HyperMedia Center Setting menu. Here you can find the general settings for HyperMedia Center software, and duplicated control settings for other options such as **TV**, **Videos** , and **Radio**.



6.1 TV

Please refer to the setting description in **TV** section

6.2 Videos

Please refer to the setting description in **Video** section

6.3 Pictures

Please refer to the setting description in **Picture** section

6.4 Radio

Please refer to the setting description in **Radio** section

6.5 General Settings

In General Settings, there are many options for you to choose:



Multi-Language Option: English, Chinese, German, French, Spanish, Italian, Portuguese, Russian, Japanese, Polish, Czech, Dutch, Greek, Farsi, Serbian, Romanian and Turkish, Multi-language to meet your need.

Change Theme: You may use this function to change the color tone on the HyperMedia Center skin.

Background: You may use this feature to Enable or Disable the Background you have selected for the HyperMedia Center.

Change Font Color: 8 vivid backgrounds for you to select. It is wonderful to freshen up your vision by changing background colors every day.

6.6 About HyperMedia Center



For more information, please see the attached.